 



DISPENSE-RITE® SLR SERIES BAFFLE SELECTION INSTRUCTIONS

- 1 Rotate the cover ring counterclockwise and remove from the dispenser. Remove the cardboard insert and discard. Behind the cardboard insert you will find a complete set of baffles that cover a full range of cup rim diameters ranging from 3" - 4-1/2" (8 oz to 44oz).

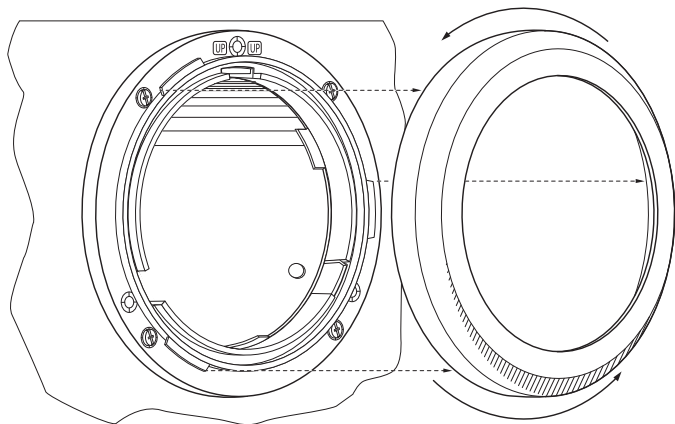


- 2 Determine which is the correct baffle for your particular cup size. Refer to the diagram shown on the right for correct baffle sizing. The appropriate baffle should be selected based on a measurement of the cup's outside rim diameter.

 - 3 Install the appropriate baffle (see step 2) onto the ring by lining up the posts in the ring with the holes in the baffle. Be sure the baffle is completely flush with the underside of the ring and that it is inserted underneath the three retention tabs.

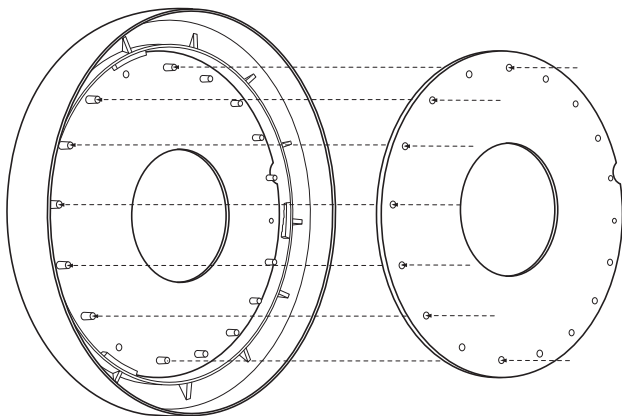


SLR-2 Series Rubber Baffles (select one)

1 Notch for Small Baffle

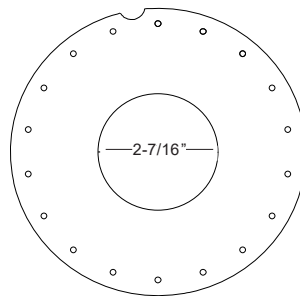


Small Baffle (1 notch)
Cup Rim Diameters: 3" - 3 1/4"
Approx. Cup Sizes: 8 - 14 oz.
Part: SLRB-2SM

2 Notches for Medium Baffle

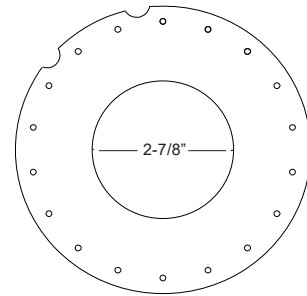


Medium Baffle (2 notches)
Cup Rim Diameters: 3 3/8" - 3 3/4"
Approx. Cup Sizes: 16 - 24 oz.
Part: SLRB-2MD

3 Notches for Large Baffle

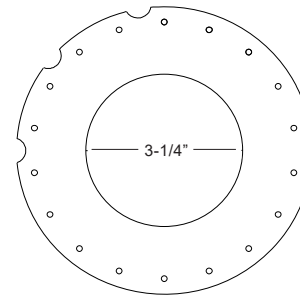


Large Baffle (3 notches)
Cup Rim Diameters: 3 3/4" - 4 1/4"
Approx. Cup Sizes: 24 - 32 oz.
Part: SLRB-2LG

 4 Notches for Extra Large Baffle

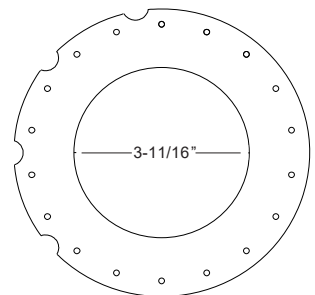

Extra Large Baffle (4 notches)
Cup Rim Diameters: 4 1/4" - 4 1/2"
Approx. Cup Sizes: 32 - 44 oz.
Part: SLRB-2XL

 - 4 Reinstall the cover ring onto the dispenser and rotate clockwise to secure.

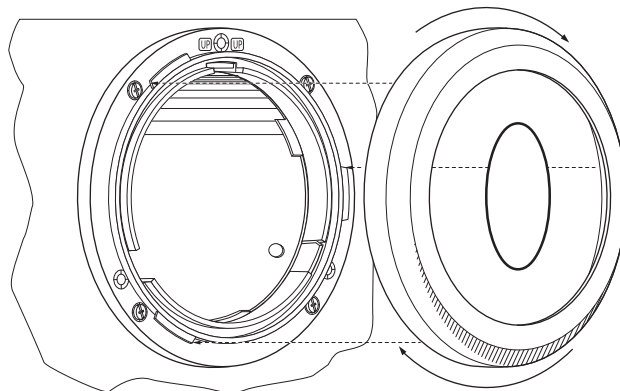

- 5 Insert a full sleeve of cups into the dispenser to test if the baffle is the proper size for your cups. If you are not satisfied with the dispensing action a baffle change may be required.



Diversified Metal Products, Inc.

2205 Carlson Drive • Northbrook, IL 60062 • (847) 753-9595 • fax (847) 753-9648
www.dispense-rite.com • sales@dispense-rite.com