	ENSE-RITE® R-2 Series	Project			
	r Cup Dispensers	Price	Quant	tity	
		Total	Shipping		
<ul> <li>ABS Plastic Cons</li> <li>No-jam design</li> <li>All models are NS</li> <li>Mount horizontall</li> <li>Attractive black rin Available colo</li> </ul>	SF Listed y, vertically or in angled positions ng bezel standard - Optional coloro ors: Silver Satin (stainless finish) ship with 2 compression springs.	ed rings are available.	er	B	
"F" Spring:	Foam cups in any position Paper or Plastic cups in a horiz	contal position			
"P" Spring:	Paper or Plastic cups in a verti	cal or angled position	L	<b>_</b>	

	ONE-SIZE-FITS-ALL	ONE-SIZE-FITS-ALL	ONE-SIZE-FITS-ALL
Reference	SLR-2	SLR-2S	SLR-2L
Range of	3 <sup>°</sup> to 4-1/2 <sup>°</sup>	3 <sup>°</sup> to 4-1/2 <sup>°</sup>	3 <sup>°</sup> to 4-1/2 <sup>°</sup>
Adjustability	77 to 114mm	77 to 114mm	77 to 114mm
A	22 <sup>"</sup>	17 <sup>"</sup>	28 <sup>°</sup>
Under Counter Length	559mm	432mm	711mm
B	7-1/8 <sup>°</sup>	7-1/8 <sup>°</sup>	7-1/8 <sup>"</sup>
Ring Bezel Diameter	181mm	181mm	181mm
C	5 <sup>"</sup>	5 <sup>"</sup>	5 <sup>°</sup>
Tube Diameter	127mm	127mm	127mm
D	5-1/4 <sup>°</sup>	5-1/4 <sup>"</sup>	5-1/4 <sup>"</sup>
Mounting Collar Cut Out	134mm	134mm	134mm
	NSE	NSE	NSE

## Installation Instructions

- 1. Cut hole for mounting collar. (Row D from chart above)
- 2. Rotate cover ring clockwise and remove from dispenser.
- 2. Insert dispenser with the mounting collar "UP" arrow to the top for horizontal or angled mounting and to the rear for vertical mounting.
- 3. Drill four 9/64" (4mm) holes and fasten mounting collar with supplied screws.
- 4. Replace cover ring and rotate clockwise to secure to dispenser.

## **Adjustment Instructions**

- 1. Rotate cover ring clockwise and remove from dispenser.
- 2. Remove cardboard shipping insert and discard.
- 3. Remove instruction and baffle kit. Refer to instructions for proper baffle sizing based on cups outside rim diameter.
- 4. Install the appropriate baffle (see step 3) onto the ring by lining up the posts in the ring with the holes in the baffle. Be sure the baffle is completely flush with the underside of the ring and that it is inserted underneath the three retention tabs.
- 5. Replace cover ring and rotate clockwise to secure to dispenser.
- 6. Check the dispensing action. Cups should be dispensed one at a time.



## **Diversified Metal Products, Inc.**

2205 Carlson Drive • Northbrook, IL 60062 • (847) 753-9595 • fax (847) 753-9648 www.dispense-rite.com • sales@dispense-rite.com