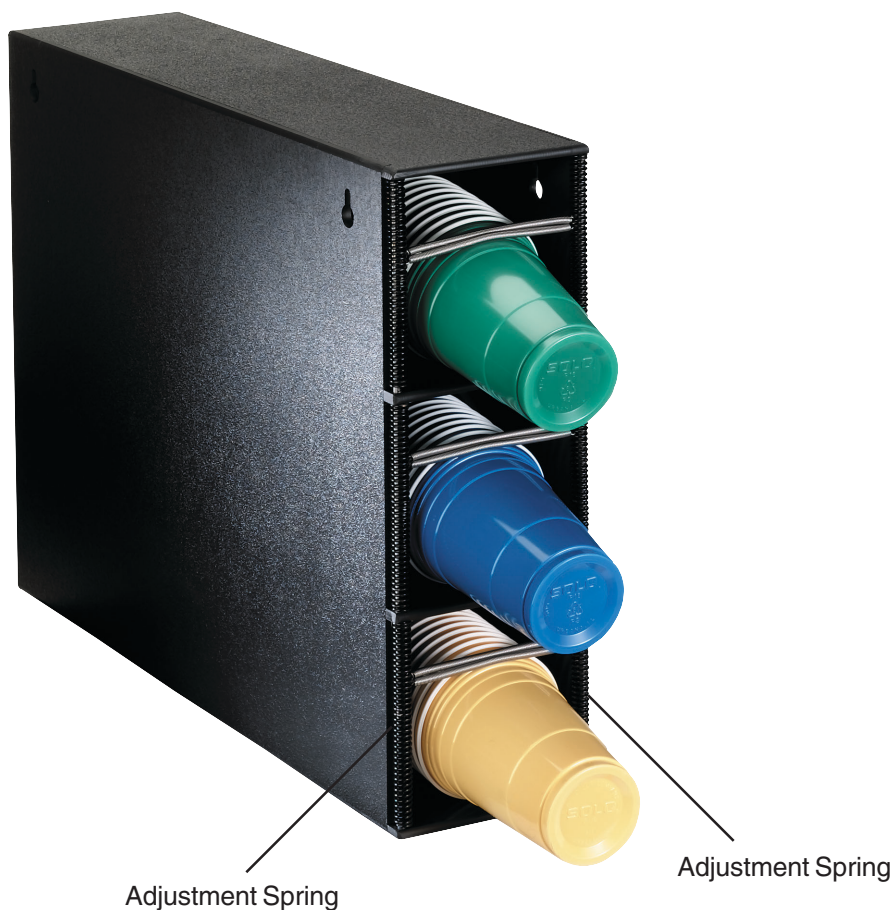


# ADJUSTMENT INSTRUCTIONS FOR *DISPENSE-RITE*® PL-CT SERIES COUNTERTOP DISPENSING CABINETS

*PL-CT Series* Countertop Dispensing Cabinets are designed to accommodate paper, plastic or foam cups with rim diameters ranging from 2-5/8" to 4-3/4". The dispenser is completely assembled, but requires a minor adjustment before it can be used. Please review the instructions below for adjusting the dispenser to fit your cup sizes.



**Fig. 1**

1. Load a sleeve of cups to be dispensed, rim first, in to each section of the cabinet.
2. To adjust for cup size locate the two black vertical adjustment springs on either side of the unit (see Fig.1)
  - A. Turn both adjustment springs clockwise to tighten for smaller cup sizes.
  - B. Turn both adjustment springs counter-clockwise to loosen for larger cup sizes.
  - C. When unit dispenses one cup at a time your dispenser is properly adjusted and ready for use.
3. Optional suction cup feet have been provided with this unit. If you prefer the suction cup feet for your application remove the existing feet and install the replacement suction cup feet provided.

***DISPENSE-RITE*®**

**Diversified Metal Products, Inc.**

2205 Carlson Drive • Northbrook, IL 60062 • (847) 753-9595 • fax (847) 753-9648  
www.dispense-rite.com • sales@dispense-rite.com